

FIG. 1

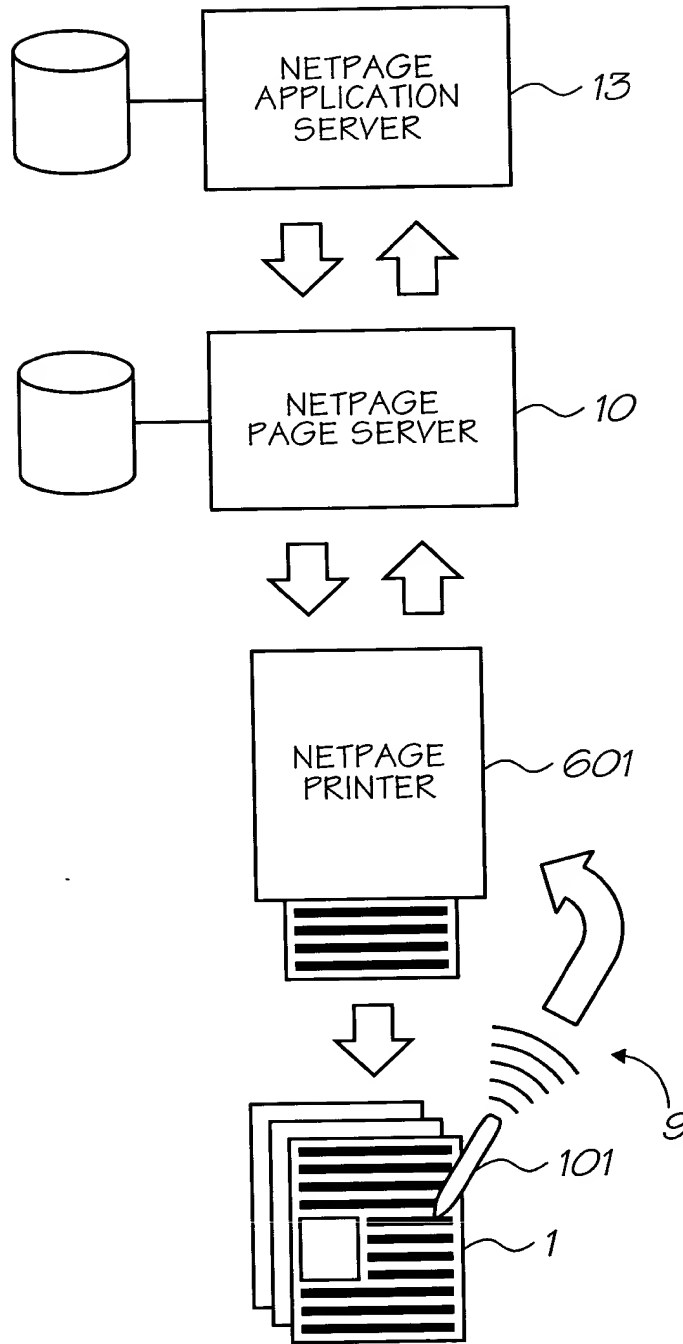 


FIG. 2

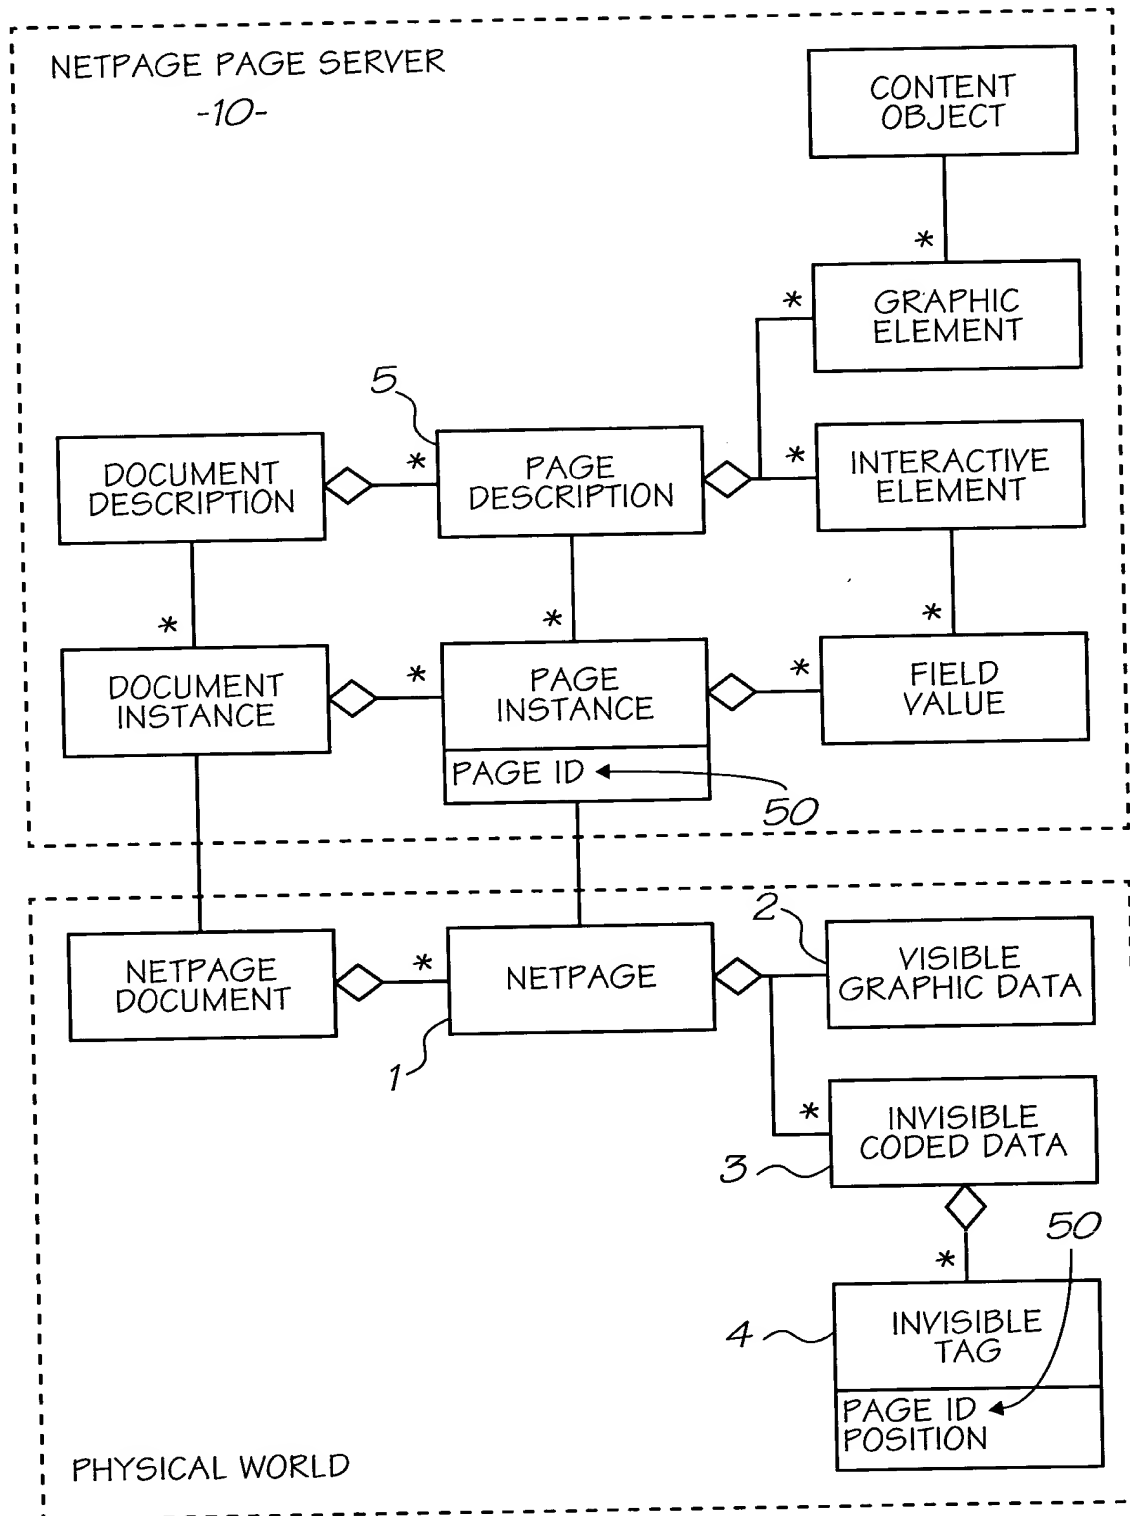 


FIG. 3

4/29

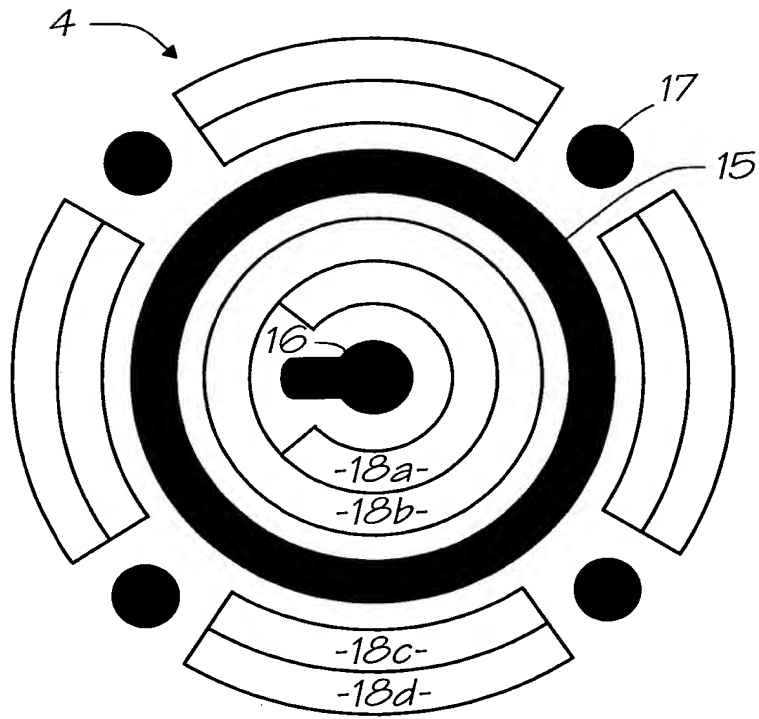 


FIG. 4a

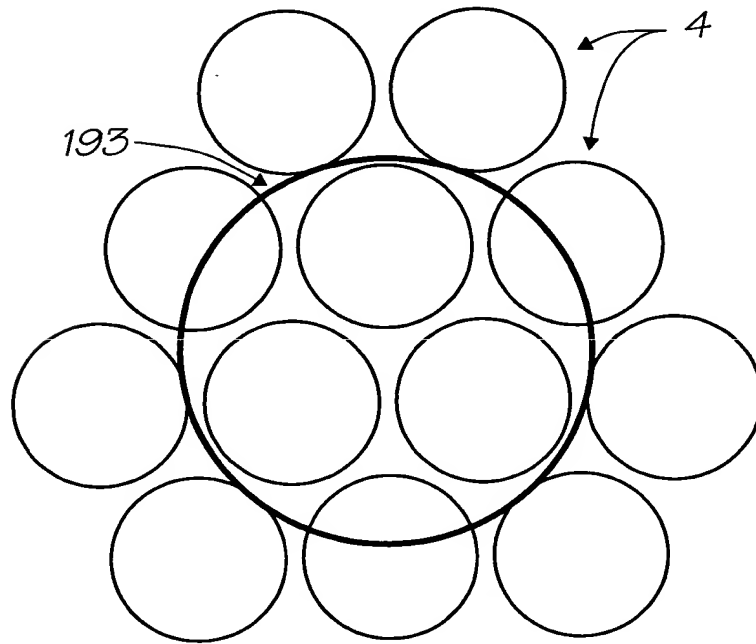 


FIG. 4b

000007-2456560



6/29

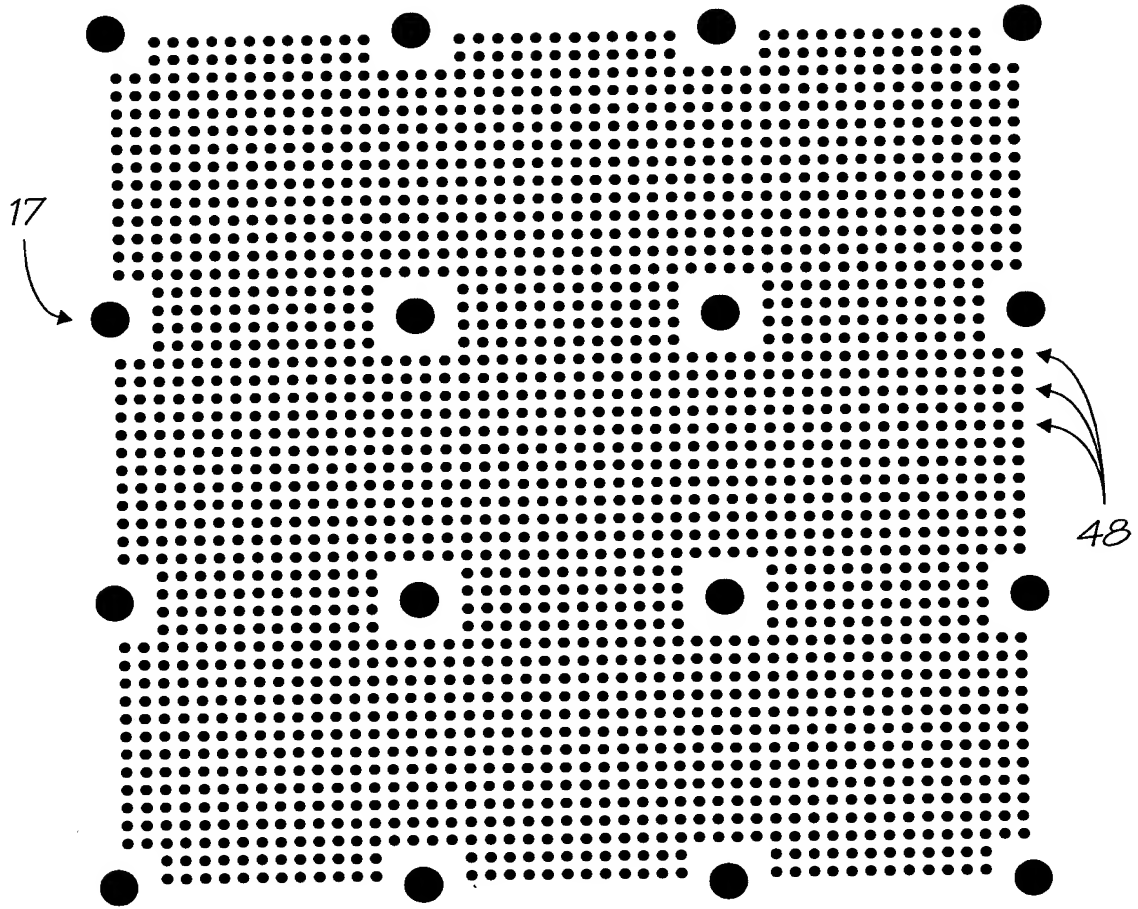 


FIG. 5c

|    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|
|    |    | 1A | 4G | 1B | 4F | 1C | 4O |    |
|    | 0E | 2L | NZ | 2H | WZ | 2D | 7E | 2A |
| 47 | 4C | 1D | 4F | 1E | 4J | 1F | 4N | 1G |
|    | 3K | 2M | 7E | 2I | 1E | 2E | HZ | 2B |
|    | 4B | 1H | 4E | 1I | 4J | 1J | 4M | 1K |
|    | 3G | 2N | 3F | 2J | 3E | 2F | 3D | 2C |
|    | 4A | 1L | 4D | 1M | 4F | 1N | 4L | 1O |
|    |    | 2O | 3C | 2K | 3B | 2G | 3A |    |

FIG. 5d

000007-40000

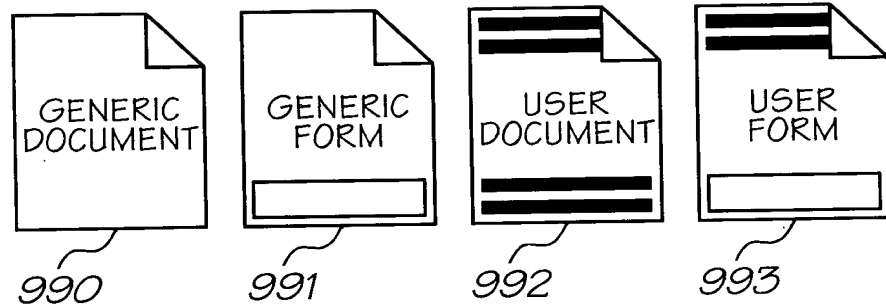 


FIG. 6

FIXED INFORMATION ~ 994

VARIABLE INFORMATION ~ 995

COMMAND BUTTON ~ 996

INPUT FIELD ~ 997

DRAGGABLE COMMAND ~ 998

FIG. 7

000004-24960900

8/29

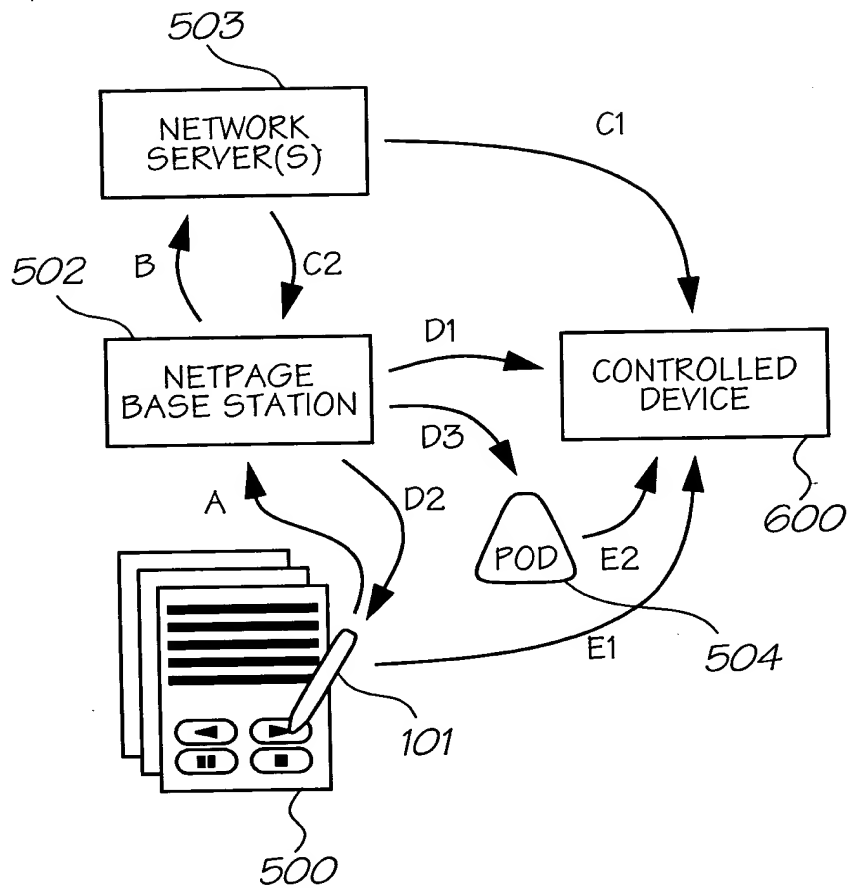 


FIG. 8



9/29

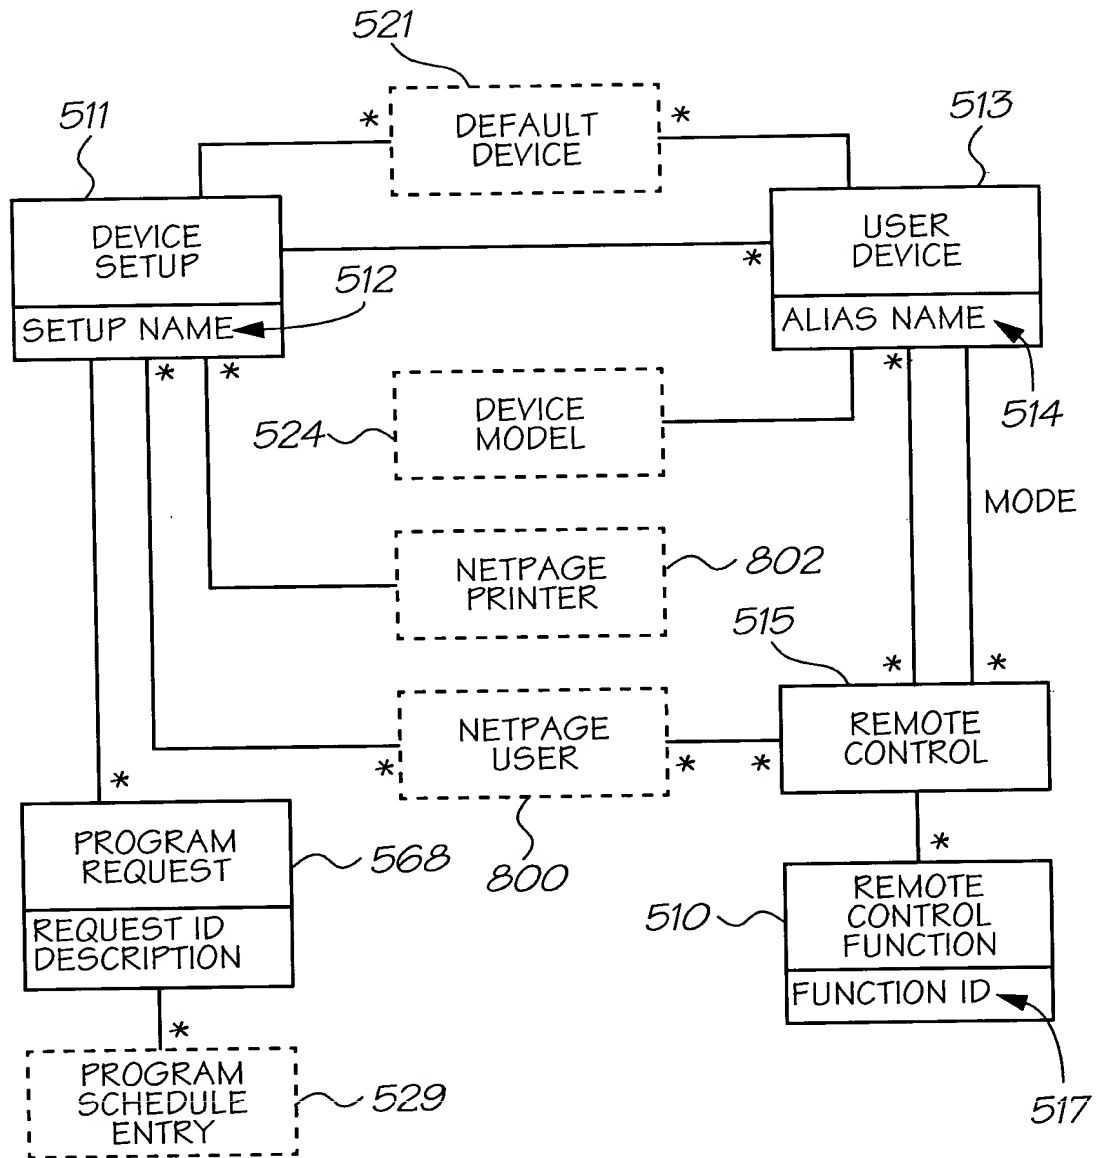 


FIG. 9

10/29

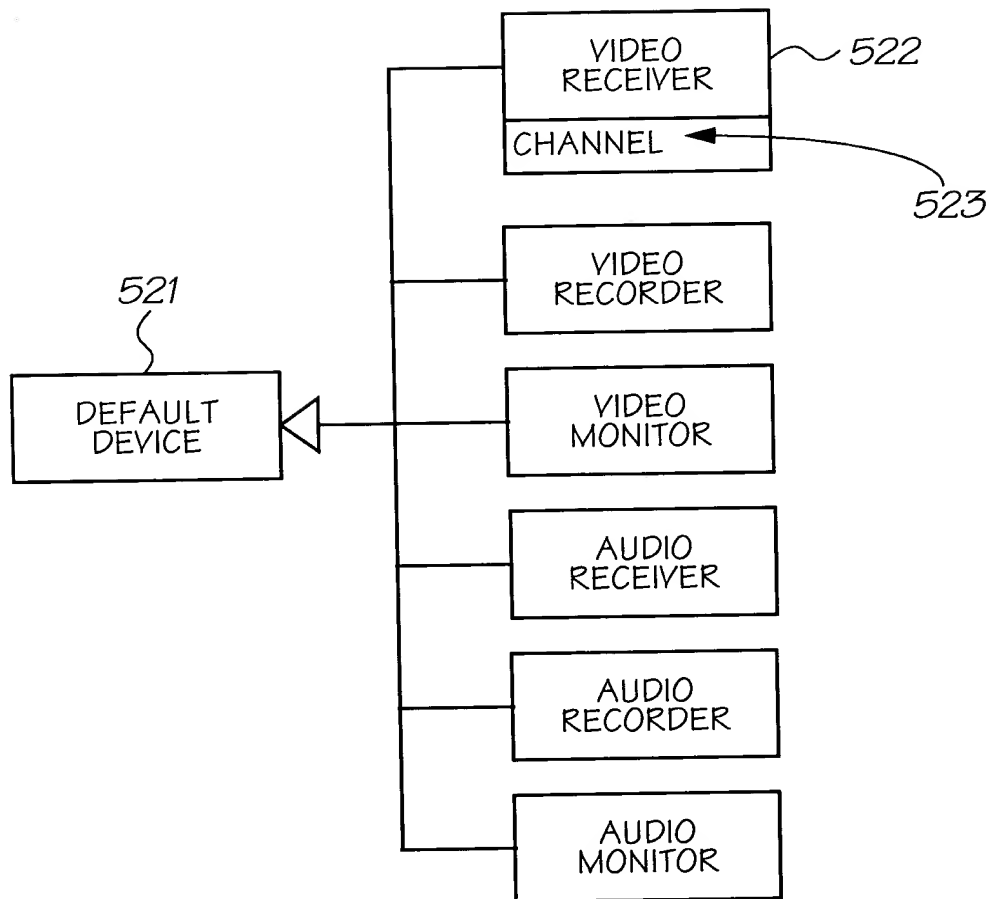 


FIG. 10

11/29

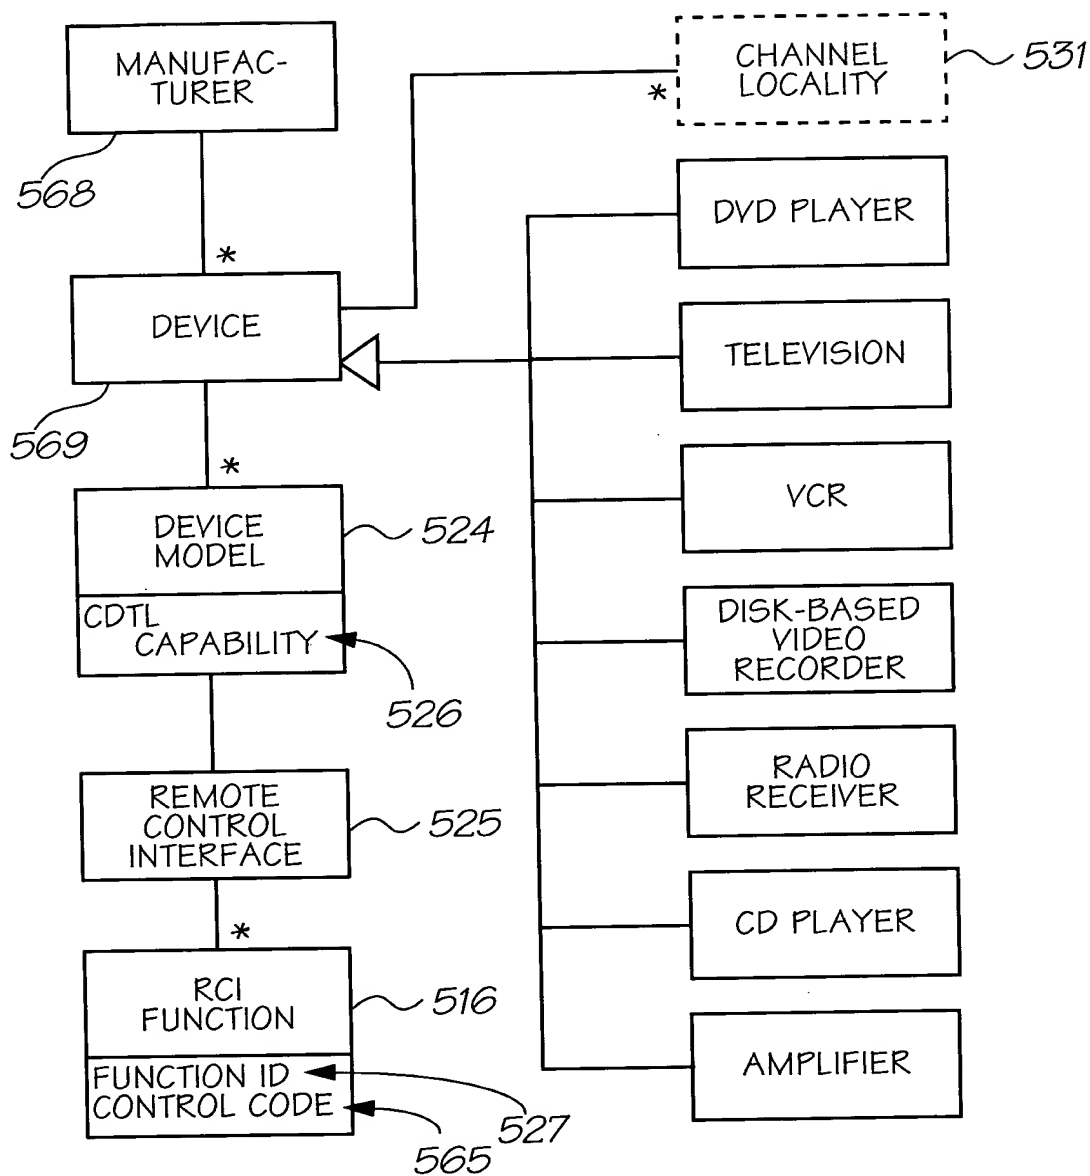 


FIG. 11

12/29

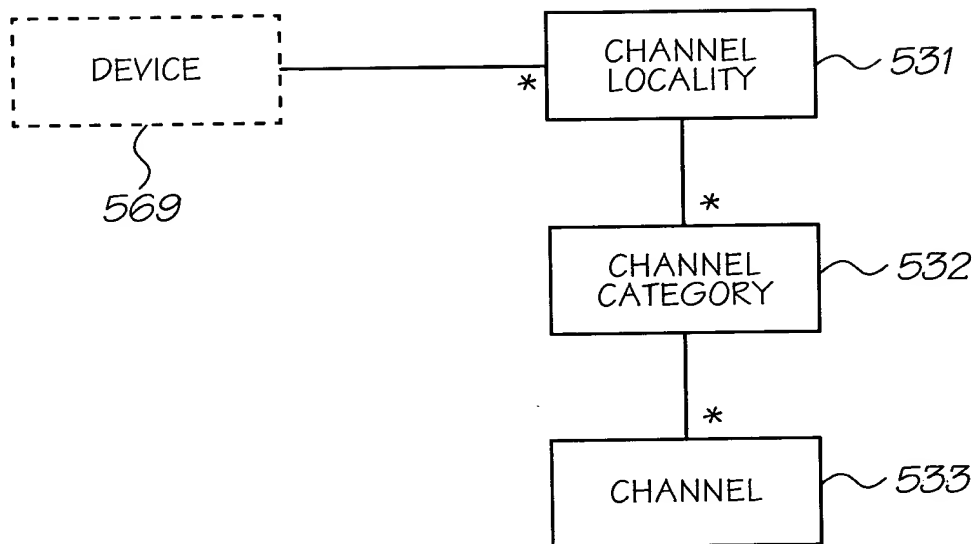 


FIG. 12

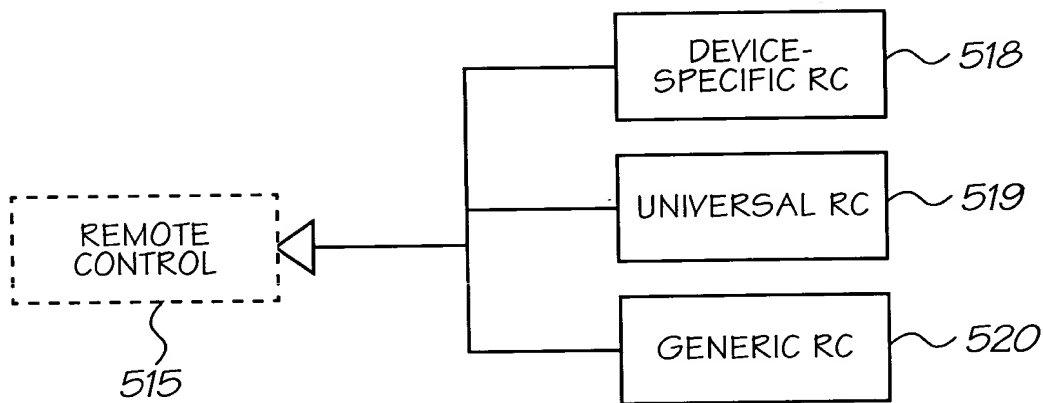 


FIG. 13

|           |           |          |
|-----------|-----------|----------|
| APPROVED  | C.G. FIG. |          |
| BY        | CLASS     | SUBCLASS |
| DRAFTSMAN |           |          |

13/29

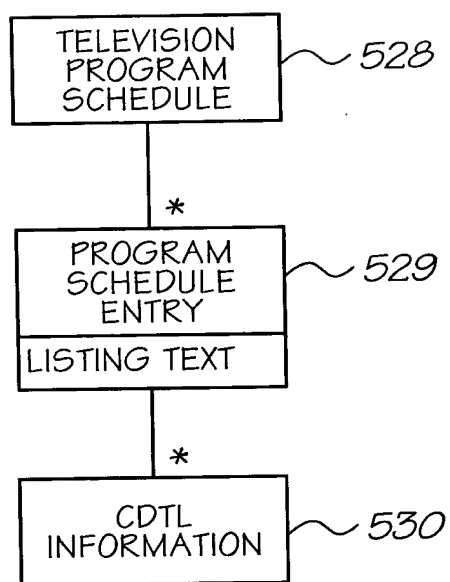 


FIG. 14

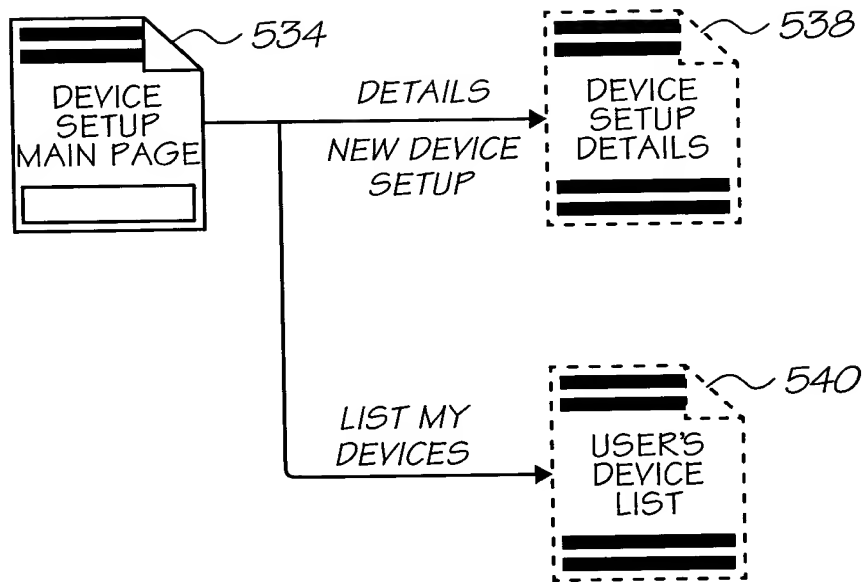 


FIG. 15

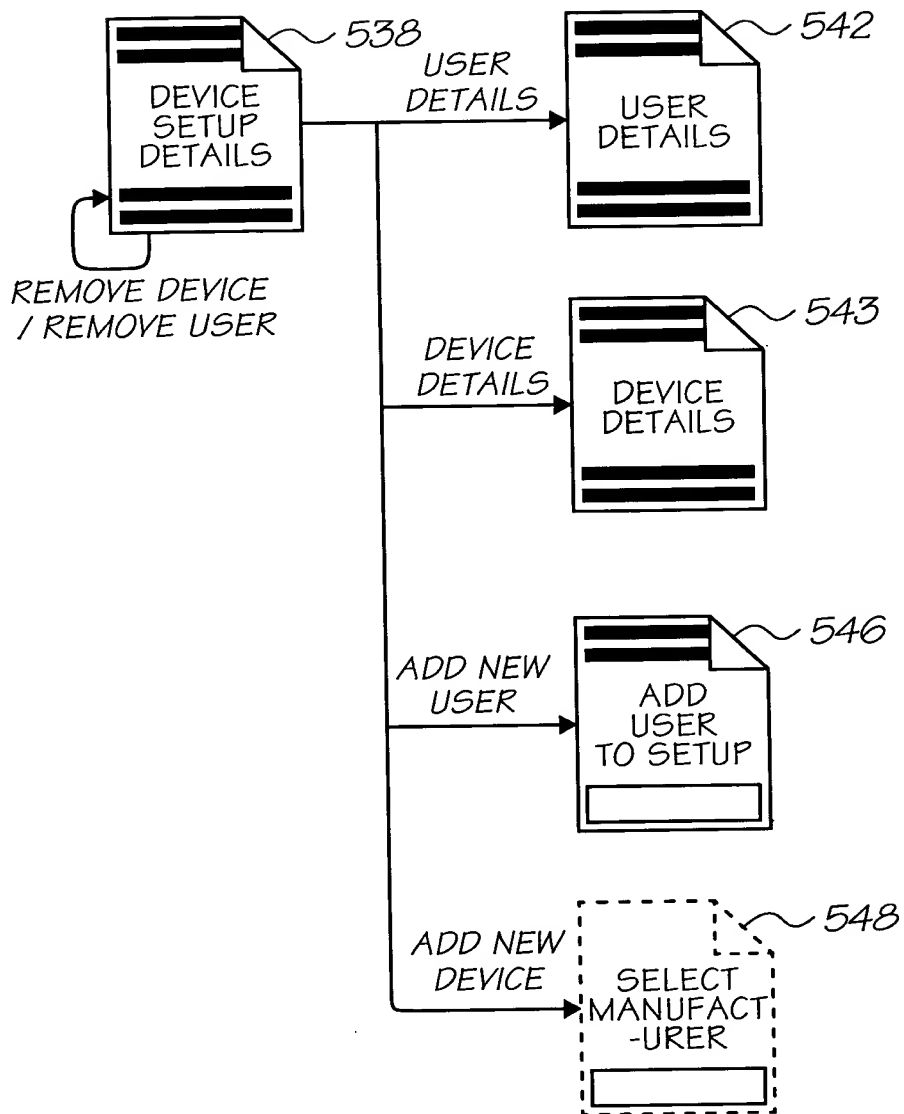 


FIG. 16

000007-2456560

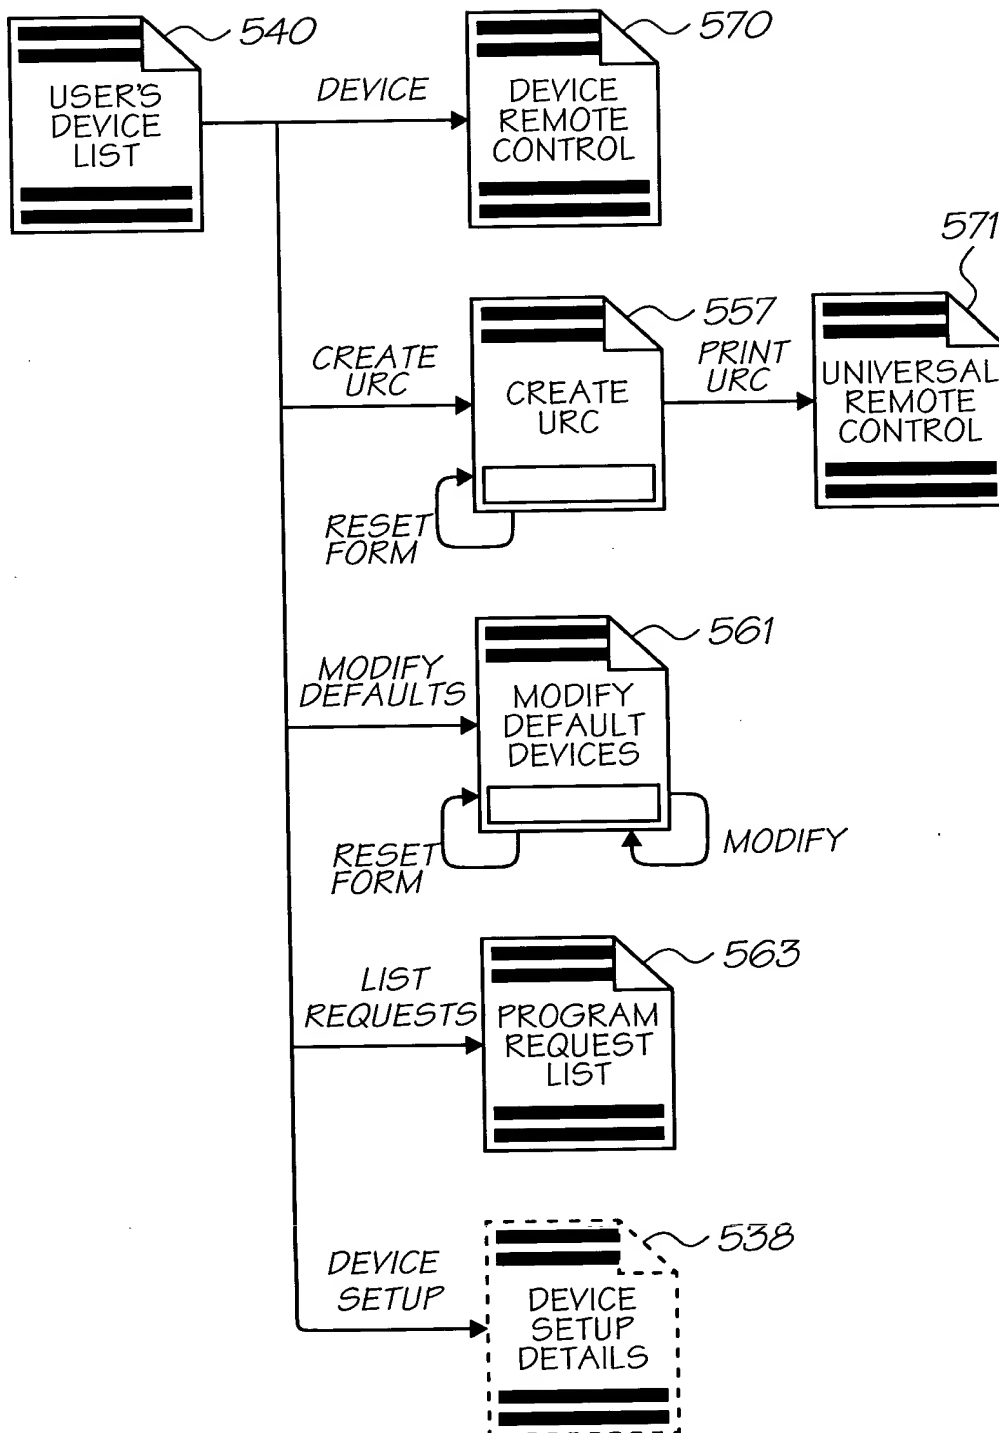 


FIG. 17



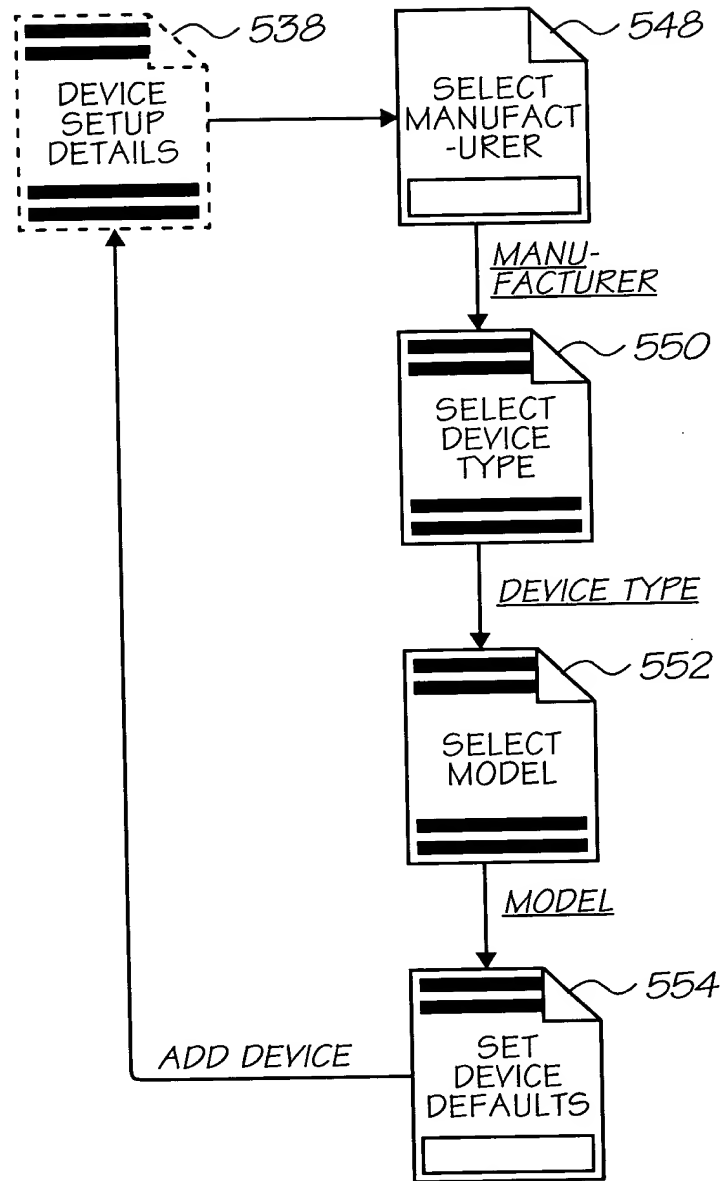 


FIG. 18

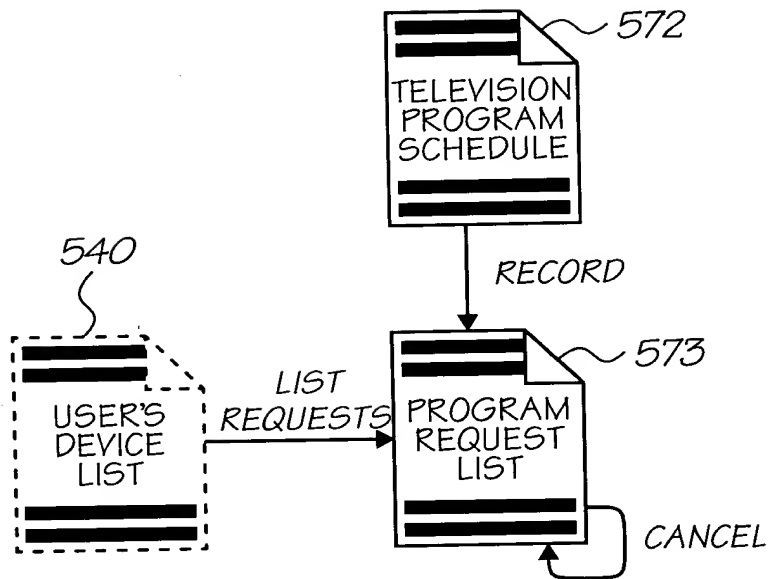 


FIG. 19

DEVICE SETUP MAIN PAGE

PAGE 1 OF 1

CURRENT DEVICE SETUPS FOR THIS PRINTER:

DETAILS

535

SETUP NAME

USER NAME

USER NAME

DETAILS

SETUP NAME

USER NAME

USER NAME

CLICK ON DETAILS (ABOVE) TO VIEW OR MODIFY DEVICE SETUP  
OR  
ENTER SETUP NAME (BELOW) TO CREATE NEW DEVICE SETUP

SETUP NAME

536

NEW DEVICE SETUP

537

534

539

LIST MY DEVICES

FIG. 20

# DEVICE SETUP DETAILS

PAGE 1 OF 1

SETUP NAME

## REGISTERED USERS:

|           |         |        |
|-----------|---------|--------|
| USER NAME | DETAILS | REMOVE |
| USER NAME | DETAILS | REMOVE |
| }         |         |        |
| USER NAME | DETAILS | REMOVE |

541

544

545

ADD NEW USER

## DEVICES:

|              |         |        |
|--------------|---------|--------|
| DEVICE ALIAS | DETAILS | REMOVE |
| DEVICE ALIAS | DETAILS | REMOVE |
| }            |         |        |
| DEVICE ALIAS | DETAILS | REMOVE |

541

544

547

ADD NEW DEVICE

538

FIG. 21

DEVICE LIST FOR USER NAME PAGE 1 OF 1

PRESS A DEVICE BUTTON TO PRINT A REMOTE CONTROL PAGE

|   |                        |
|---|------------------------|
| <span style="border: 1px dashed black; padding: 2px;">DEVICE ALIAS</span> | DEFAULT VIDEO RECORDER |
| <span style="border: 1px dashed black; padding: 2px;">DEVICE ALIAS</span> | DEFAULT VIDEO MONITOR  |
| <span style="border: 1px dashed black; padding: 2px;">DEVICE ALIAS</span> | TELEVISION             |

}

}

DEVICE ALIAS

CREATE URC CREATE UNIVERSAL REMOTE CONTROL

556

540

562 LIST REQUESTS

560 MODIFY DEFAULTS

559 DEVICE SETUP

FIG. 22

CREATE UNIVERSAL REMOTE CONTROL PAGE 1 OF 1

CURRENT DEVICE SETUP: SETUP NAME

CHECK DEVICES REQUIRED ON UNIVERSAL REMOTE CONTROL

|                          |              |             |
|--------------------------|--------------|-------------|
| <input type="checkbox"/> | DEVICE ALIAS | DEVICE TYPE |
| <input type="checkbox"/> | DEVICE ALIAS | DEVICE TYPE |
|                          | }            | }           |
| <input type="checkbox"/> | DEVICE ALIAS | DEVICE TYPE |

558 PRINT URC

557

RESET FORM

FIG. 23

DEVICE ALIAS

REMOTE CONTROL

PAGE 1 OF 1

DATE & TIME

TV / VIDEO

POWER ON/OFF

1

2

3

4

5

6

7

8

9

0

565

- / --

MUTE

+

VOLUME

+

CHANNEL

-

-

570

REPRINT

PRINT TV PROGRAM

LIST DEVICES

FIG. 24

# UNIVERSAL REMOTE CONTROL

 
PAGE 1 OF 1

DATE & TIME

|              |              |
|--------------|--------------|
| DEVICE ALIAS | DEVICE ALIAS |
| DEVICE ALIAS | DEVICE ALIAS |
| DEVICE ALIAS | DEVICE ALIAS |

POWER ON/OFF

565

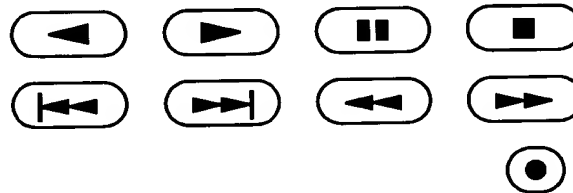

+

CHANNEL

-

|   |   |   |
|---|---|---|
| 1 | 2 | 3 |
| 4 | 5 | 6 |
| 7 | 8 | 9 |
| 0 |   |   |

+

VOLUME

-

571

- / --

MUTE

REPRINT

PRINT TV PROGRAM

LIST DEVICES

FIG. 25



SELECT MANUFACTURER

PAGE 1 OF #

TRAN NBR

ADDING NEW DEVICE TO SETUP:

SETUP NAME

SELECT MANUFACTURER OF DEVICE

MANUFACTURER

MANUFACTURER

MANUFACTURER

549

}

MANUFACTURER

548

FIG. 26

SELECT DEVICE TYPE

PAGE 1 OF 1

TRAN NBR

ADDING NEW DEVICE TO SETUP:

SETUP NAME

SELECT

MANUFACTURER

DEVICE TYPE

TELEVISION

VCR

DVD PLAYER

AMPLIFIER

CD PLAYER

DISK-BASED VIDEO REC

RADIO RECEIVER

551

550

FIG. 27



SET DEVICE DEFAULTS

PAGE 1 OF # TRAN NBR

ADDING NEW DEVICE TO SETUP:

SETUP NAME

ENTER DEVICE ALIAS FOR

MANUFACTURER

DEVICE TYPE

MODEL

ALIAS

DEVICE ALIAS

DO YOU WANT THIS TO BE YOUR DEFAULT

YES

DEFAULT DEVICE TYPE ?

☐

DEFAULT DEVICE TYPE ?

☐

DEFAULT DEVICE TYPE ?

☐

}

DEFAULT DEVICE TYPE ?

☐

(CHECK ALL THAT APPLY)

554

555

ADD DEVICE

FIG. 29

TELEVISION PROGRAM SCHEDULE  
FOR [ ] DATE [ ]

DATE & TIME

PAGE 1 OF #

PROGRAM LISTING  
ENTRY

REC

PROGRAM LISTING  
ENTRY

REC

567

566

~

572

FIG. 30